



# HOME PARTY SERIES

Ideal for home, Villa, shopping centers, Resorts, KTV, bar…
Birthday party, friends gathering, atmosphere Creation, advertising…
Miniature stage lighting.

User's Manual

RGBW	
HPD-LED-SQUARE	HPD-LED-BEAM
HPD-LED-STARS	HPD-LED-FLOWER
HPD-LED-DIAMOND	HPD-LSR-FIREFLY
HPD-LED-WATER	HPD-LSR-GRILLE



# **SECURITY INFORMATION**

Thank you for using our products, the high quality products and perfect service will make you satisfied. For your safety and the better play of the lighting function, please read the User's Manual carefully before your operation.

In order to install, operate, maintain the lighting safely, it's recommended to install and operate the light by qualified professionals according to the guidance of this manual. **Warning**: Disconnect the plug of power adapter when you do not use it.

### INTRODUCTION

### Packing content:

Please check if all the contents are completed after unpacking, then, check if the light is undamaged. Please you can keep the original package and return to the factory if it's damaged.

Check if the voltage is in accordance with the rated power.

# All the safety should be taking into consideration before and during operation and installation:

1. Open the carton, take all the accessories from it, and open the Polystyrene packaging, take out the lighting and check whether it's damaged.

2. Only the professional person can repair and operate the lighting under the instruction of the manual.

3. This product for indoor use only. The protection rating is IP20. Please keep the light far away from the water or other liquid.

4. The light must keep dry and avoid to use under the moisture, overheat or dusty environment.

5. Make sure the normal and stable work environment temperature of this lighting not exceed 40  $^\circ\!C$  , the lowest temperature not exceed -20  $^\circ\!C$   $_\circ$ 

6. Do not touch the light while it is working under steady heat dissipation working conditions.

7. There is not any replaceable spare parts inside the light, do not use the light when the housing cover is opened.

HPD series product is one of the Mini stage series. It can be used both as hanging light and ceiling light by using the ceiling panel to replace the handling .There are 10 coding switches, cable socket of 1 output and 1 input, DC 12 v input socket behind the light. At present, HPD series has more than 8 lights effect. All of them have features of easy to control and understanding, small and exquisite appearance, modern and practical, rich lighting and dynamic. Not only can a single use; you can use any combination according to your preferences. You can choose a single one to use, also can combine any of them according to your preference.

#### Application fields:

Homes, villas, hotels, bars, KTV, shopping center, resorts, multi-function hall... Birthday Party, friends gathering, personal enjoyment, gifts, atmosphere creation, advertising...

### **BASIC INFORMATION**

### Package:

White box, with high-strength plastic inside to fix the light. Master box:K-type corrugated carton color printing, with 18pcs per carton.

### Packing Contents:


HPD light 1pc, 12V 2A adapter 1pc, User's Manual 1pc

### FEATURES

- 1. Small size, light weight, attractive appearance with modern stream line style which consistent with the public aesthetic ideas.
- 2. Low power consumption; Energy saving; High quality lighting source with excellent brightness (lighting source: laser/LED), durable.
- 3. With many different effects, Multiple forms of mechanical motion, move or stop, fast or slow.
- 4. Air isolation, great heat dissipation, reasonable construction design, low noise fan to assist air convection.
- 5. Durable, made of high quality ABS plastic, good abrasion resistance, chemical stability, electrical and mechanical strength.
- 6. Surface color and pattern can be customized. Can form rich color gorgeous appearance, and make it match with different external environment.
- 7. Unique assembly structure design, simple installation, can be installed by hanging or ceiling.
- 8. It can be used 5.0 DC socket, external connect the 12V power adapter, easy to use and safe.
- 9. The cable as the DMX signal transmission line, this light have cable socket of 1 output and 1 input, easy to realize signal mix.
- 10. Multiple styles and choice. Operation by unit or multiples matching various combination, with different control system such as DMX control, Tablet PC, and smart phone. It's possible to be a DIY lighting master.
- 11. A wide range of applications for different occasions.
- 12. Elegant package both as electronic consumption product and as a GIFT.




### STRUCTURE INTRODUCTION

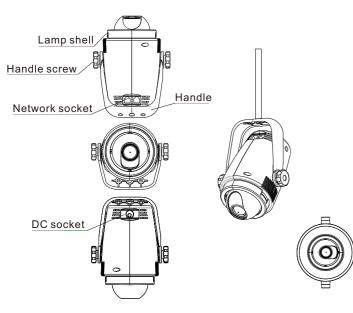

### INSTALLATION INSTRUCTION


The installation of handling:

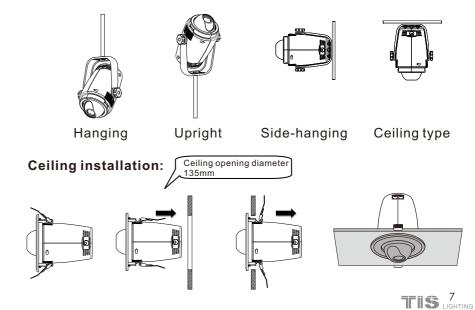

TIS 6

### CONNECTION OF POWER SUPPLY AND CONTROL NETWORK CABLE


### Connect to the adapter:

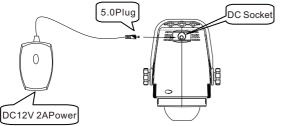


# The usage of network cable, the change between network cable and Caron seat:

The light use network cable as a control method of DMX signal. The connect method of network connecter is the same as other comment cable.

You can purchase the network convert box from us the transfer the network cable, Caron seat and Caron head, or you can also connect the Caron plug according to the below figure.

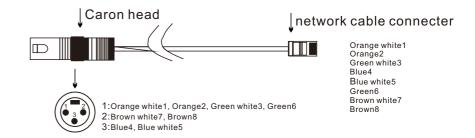



## Settings of DMX address:

 



### LIGHTING PARAMETERS AND EFFECTS DISPLAY 1

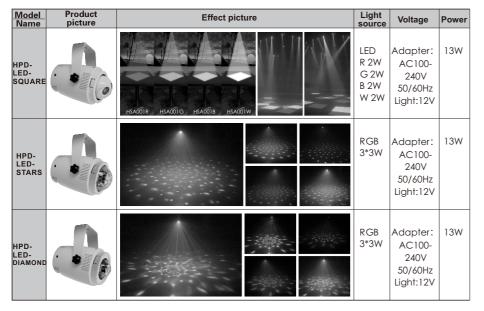


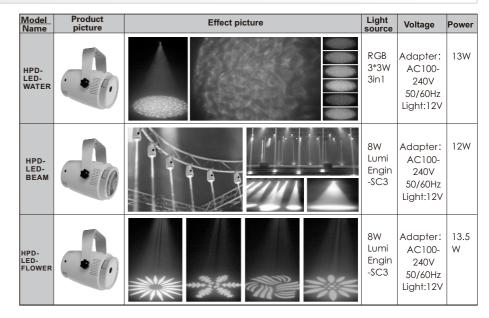

TIIS 10 LIGHTING




### LIGHTING PARAMETERS AND EFFECTS DISPLAY 2

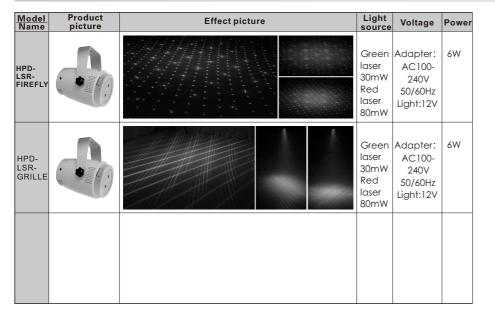


### **DESCRIPTION OF LIGHTING FUNCTION**

 Address code's setting of AUTO mode:



### Address code's setting of Sound Activated mode:

 


### **DESCRIPTION OF LIGHTING FUNCTION**

Master/slave mode—Connection indication of by using network cable and DMX signal cable.(Note:the address code is the same):

### Connection indication of DMX512 control mode:

 DMX Controller



DMX CHANNEL VALUE TABLE 1				
Model and Name	Channel	function	Value	Description
			0—7	Off
	CH1	Strobe	8—250	Strobe(slow—fast)
			221—255	On
	CH2	Dimmer	0—255	From dark to bright
HPD-LED-SQUARE	CH3	X axis	0—255	0—360°
	CH4	Y axis	0—255	0—45°
	CH5	Motor speed	0—255	Motor speed adjustment
		Auto/	0—30	N/A
	Ch6	Sound	31—180	Auto
		Activation	181—255	Sound Activation
	CH1	Strobe	8—255	Strobe (slow-fast)
			0—7	off
			8—255	Strobe (slow-fast)
			0—22	Off
			23—45	Red
			46—68	Green
HPD-LED-STARS			69—91	Blue
			92—114	Red+ Green
	CH2		115—137	Green+ Blue
			138—160	Red+ Blue
			161—183	Red+ Green+ Blue
			184—206	Effect I
			207—229	Effect II
			230—255	Effect III

DMY CHANNEL VALUE TABLE 1

TIS IGHTING

## DMX CHANNEL VALUE TABLE 2

Model and Name	Channel	function	Value	Description
			230—255	Effect III
	CH3	Speed	0—255	Effect speed adjustment
			0—79	Place
	0114		80—159	Jitter
	CH4	Motor	160—207	Forward
			208—255	Reversal
		Auto /	0—30	N/A
	CH5	Sound	31—180	Auto
		Activation	181—255	Sound Activation
	CH1	Strobe	0—7	Off
			8—255	Strobe (slow—fast)
		Color	0—22	Off
			23—45	Red
			46—68	Green
HPD-LED-DIAMOND			69—91	Blue
HPD-LED-DIAMOND			92—114	Red+ Green
	CH2 C		115—137	Green+ Blue
			138—160	Red+ Blue
			161—183	Red+ Green+ Blue
			184—206	Effect I
		207—229	Effect II	
			230—255	Effect III
	CH3	Speed	0—255	Effect speed adjustment

Model and Name	Channel	function	Value	Description
			0—79	Place
	0114		80—159	Jitter
	CH4	Motor	160—207	Forward
			208—255	Reversal
		Auto /	0—30	N/A
	CH5	Sound	31—180	Auto
		Activation	181—255	Sound Activation
	CH1	Strobe	8—255	Strobe (slow—fast)
	CH2 Color		0—22	Off
			23—45	Red
			46—68	Green
			69—91	Blue
		2 Color	92—114	Red+ Green
			115—137	Green +Blue
HPD-LED-WATER			138—160	Red+ Blue
NPD-LED-WATER		161—183	Red+ Green + Blue	
		184—206	Effect I	
			207—229	Effect II
			230—255	Effect III
		WATER	0—159	Place
	CH3	RIPPLE Mirro	160—207	Rorward
			208—255	Reversal





## DMX CHANNEL VALUE TABLE 3

Model and Name	Channel	function	Value	Description
		Auto / Sound	0—30	N/A
	CH4		31—180	Auto
		Activation	181—255	Sound Activation
	CH1	Strobe	0—7	Off
	СПІ	311000	8—255	Strobe (slow-fast)
	CH2	Motor	0—255	Place
HPD-LED-BEAM	CH3	Motor speed	0—255	Fast—Slow
		Auto /	0—30	N/A
	CH4	Sound	31—180	Auto
		Activation	181—255	Sound Activation
	CH1	Strobe	0—7	Off
			8—255	Strobe (slow—fast)
	CH2 Gobo	Gobo Wheel	0—79	Place
			80—159	Jitter
		GODO WIEEI	160—207	Forward
			208—255	Reversal
HPD-LED-FLOWER	CH3	Color Plate	0—159	Color Selection
			160—215	Forward
			216—255	Reversal
	CH4 Auto / Sound Activation	Auto /	0—30	N/A
			31—180	Auto
		Activation	181—255	Sound Activation

Model and Name	Channel	function	Value	Description
	CH1	Strobe	0—7	Off
			8—255	Strobe (slow-fast)
			0—31	Off
			32—63	Jumping Change
	CH2	Laser Color	64—127	Red
HPD-LSR-FIREFLY			128—191	Green
HPD-LSK-FIKEFLI			192—255	Red +Green
			0—79	Place
	СНЗ	Motor Mode	80—159	Jitter
			160—207	Forward
			208—255	Reversal
	Auto / CH4 Sound	0—30	N/A	
		Sound Activation	31—180	Auto
			181—255	Sound Activation
	CH1	Strobe	0—7	Off
	CITI		8—255	Strobe (slow-fast)
		Laser Color	0—31	Off
HPD-LSR-GRILLE			32—63	Jumping Change
	CH2		64—127	Red
			128—191	Green
			192—255	Red + Green
			0—79	Place





### **DMX CHANNEL VALUE TABLE 4**

Model and Name	Channel	function	Value	Description
	0112	Motor Mode	80—159	Jitter
	CH3	Motor Mode	160—207	Forward
			208—255	Reversal
		Auto /	0—30	N/A
	CH4	Sound	31—180	Auto
		Activation	181—255	Sound Activation

### MAINTENANCE AND REPAIR FOR THE PRODUCT

### Clearing and maintenance:

Please disconnect the power before disassemble and maintain the light. It's important to keep the light clean which can maintain the maximum brightness output and prolong its working life. It's recommended to clean the light with lint-free cloth and high-quality glass cleaner. Do not clean with alcohol or chemical solvents

When the light doesn't work, please contact professional person to repair it. Do not disassemble it by yourself.

